

String Cord Recurve

Art.Nr. 378

1. **Change the length of the string cord appropriate to your bow size. Make sure that the knot is tight.**
2. **First put the leather case over the lower end of the bow. Please make sure that the string lies exactly in the notch of the bow tip.**
3. **Now put the other leather case over the tip of the upper end. Is is important that the notch of the string is free.**
4. **Put both feet on the stringer and pull up the bow until the string of the bow slides into the notch of the bow tip.**



To unstring the bow just do these steps the other way round.

BY BEIER GERMANY

www.bogensport-beier.de