

## Target stand

**Item numbers 70, 413, 1596, 1597**


### Content

#### Screws:

- 1 piece target stand pre-assembled
  - 2 pieces dowels 20 mm
  - 2 pieces dowels 10 mm
  - 1 piece screw M6 x 140 mm
  - 2 pieces washers
  - 1 piece wing nut
- 



At the beginning, the two 10 mm dowels must be inserted into the holes provided for the 20 mm dowels.

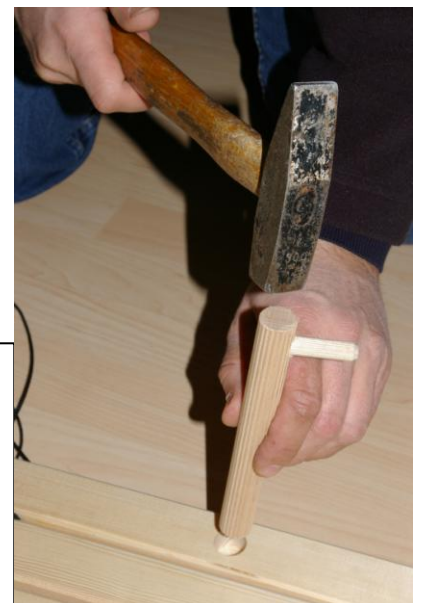

Then also insert the two 20 mm dowels into the holes provided for the pre-assembled disk stand.

Attention: The 10 mm dowels must be aligned upwards.

Beier Distribution e.K.  
Bahnhofstrasse 151  
D-96145 Sesslach  
Tel: +49 09569 188914-0  
Fax: +49 09569 188914-2  
[www.bogensport-beier.de](http://www.bogensport-beier.de)  
[info@beier-distribution.de](mailto:info@beier-distribution.de)




Slide a washer onto the screw, then insert the screw through all three woods. On the other side, slide a washer again and turn a wing nut.



Now the target stand is ready for installation.

Finally, only the wooden legs have to be unfolded and the wing nut tightened.

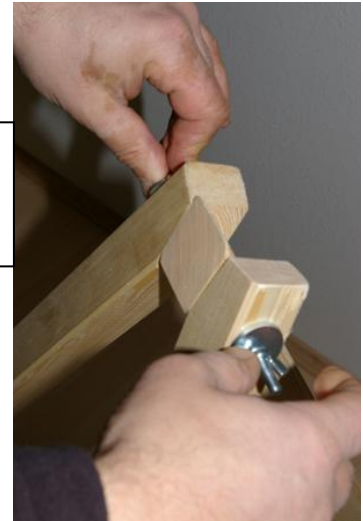

Now the target stand is finally finished.

Beier Distribution e.K.  
Bahnhofstrasse 151  
D-96145 Sesslach  
Tel: +49 09569 188914-0  
Fax: +49 09569 188914-2  
[www.bogensport-beier.de](http://www.bogensport-beier.de)  
[info@beier-distribution.de](mailto:info@beier-distribution.de)